

EPSON CD/DVD Label Direct-Printable Printer Information

February, 2009

FY	Product Name of each area			Disc Center x/y Position (physical)	Tray Type
	<A> EAI Latin	<E> Euro Pacific/Asia	<J> Japan		
00	N/A	N/A	PM-900C/Opt	141/139	Type1
00	N/A	N/A	PM-920C	141/139	Type1
01	N/A	N/A	PM-890C	141/139	Type1
01	N/A	Epson Stylus Photo 2100	PM-4000PX	75/67.5	Type2
01	Epson Stylus Photo 960 N/A	Epson Stylus Photo 950 N/A	PM-950C	75/67.5	Type2
02	N/A	N/A	PM-970C	75/67.5	Type2
02	N/A	N/A	PM-980C	75/67.5	Type2
02	Epson Stylus Photo 900 Epson Stylus Photo 900	Epson Stylus Photo 900 Epson Stylus Photo 900	PM-870C	141/139	Type1
02	N/A	N/A	PM-930C	75/67.5	Type2
02	N/A	N/A	PM-940C	75/67.5	Type2
03	Epson Stylus Photo R800 N/A	Epson Stylus Photo R800 Epson Stylus Photo R800	PX-G900	75/67.5	Type2
03	N/A	N/A	PM-G800	75/67.5	Type2
03	Epson Stylus Photo R300 Epson Stylus Photo R300M	Epson Stylus Photo R300 Epson Stylus Photo R310	PM-D750	75/67.5	Type2
03	Epson Stylus Photo R200 Epson Stylus Photo R200	Epson Stylus Photo R200 Epson Stylus Photo R210	PM-G700	75/67.5	Type2
03	N/A	N/A	PM-D1000	75/67.5	Type2
04	N/A	N/A	PX-G920	75/67.5	Type2
04	Epson Stylus Photo R1800 N/A	Epson Stylus Photo R1800 Epson Stylus Photo R1800	PX-G5000	75/67.5	Type2
04	N/A	N/A	PM-G720	75/67.5	Type2
04	Epson Stylus Photo R320 Epson Stylus Photo R320	Epson Stylus Photo R320 N/A	PM-D770	75/67.5	Type2
04	N/A	N/A	PM-G820	75/67.5	Type2
04	Epson Stylus Photo RX700 N/A	Epson Stylus Photo RX700 Epson Stylus Photo RX700	PM-A900	75/67.5	Type2
05	N/A	N/A	PX-G930	75/67.5	Type2
05	N/A	N/A	PM-A950	75/67.5	Type2
05	N/A	N/A	PX-G5100	75/67.5	Type2
05	Epson Stylus Photo R220 Epson Stylus Photo R220	Epson Stylus Photo R220 Epson Stylus Photo R230	PM-G730	75/67.5	Type2
05	Epson Stylus Photo R340 Epson Stylus Photo R340	Epson Stylus Photo R340 Epson Stylus Photo R350	PM-D800	75/67.5	Type2

05	N/A	Epson Stylus Photo RX640 Epson Stylus Photo RX650	PM-A890	75/67.5	Type2
06	Epson Stylus Photo 1400 Epson Stylus Photo 1410	Epson Stylus Photo 1400 Epson Stylus Photo 1410	PM-G4500	75/67.5	Type2
06	N/A	N/A Epson Stylus Photo 1390	N/A	75/67.5	Type2
06	Epson Stylus Photo R380 N/A	Epson Stylus Photo R360 Epson Stylus Photo R390	PM-D870	75/67.5	Type2
06	N/A	N/A	PM-A970	75/67.5	Type2
06	N/A	N/A	PM-T990	75/67.5	Type2
06	Epson Stylus Photo R260 Epson Stylus Photo R270	Epson Stylus Photo R265 Epson Stylus Photo R270	PM-G850	75/67.5	Type2
06	Epson Stylus Photo RX580 Epson Stylus Photo RX590	Epson Stylus Photo RX560 Epson Stylus Photo RX590	PM-A820	75/67.5	Type2
06	N/A	N/A	PM-A920	75/67.5	Type2
07	Epson Stylus Photo R2880 N/A	Epson Stylus Photo R2880 Epson Stylus Photo R2880	PX-5600	75/67.5	Type2
07	Epson Stylus Photo R1900 N/A	Epson Stylus Photo R1900 Epson Stylus Photo R1900	PX-G5300	75/67.5	Type2
07	Epson Stylus Photo RX680 N/A	Epson Stylus Photo RX685 Epson Stylus Photo RX690	PM-A940	75/67.5	Type2
07	Epson Stylus Photo RX595 Epson Stylus Photo RX610	Epson Stylus Photo RX585 Epson Stylus Photo RX610	PM-A840	75/67.5	Type2
07	Epson Stylus Photo R280 Epson Stylus Photo R290	Epson Stylus Photo R285 Epson Stylus Photo R290	PM-G860	75/67.5	Type2
07	N/A	N/A	PM-T960	75/67.5	Type2
08	Artisan 700 Epson Stylus Photo TX700W	Epson Stylus Photo PX700W Epson Stylus Photo	EP-801A	75/67.5	Type2
08	N/A	N/A	PM-A840S	75/67.5	Type2
08	Artisan 800 N/A	Epson Stylus Photo PX800FW Epson Stylus Photo	EP- 901A/901F	75/67.5	Type2
08	N/A	N/A	EP-301	75/67.5	Type2

* = Type 1 Tray Type was supported by older models. Newer printers support Type2 Tray Type